



# Installation Instruction

Performance Pressure Pipe

---



VW Polo GTI 6C, Seat Ibiza Cupra 6J

1.8 TSI



## Description

---

This instruction shows how to replace the OEM intercooler pipes with do88 performance intercooler pipes.

At this type of installation we always recommend that you have mechanical experience and knowledge about safety during work on vehicles.

This installation instruction is performed on an Ibiza Cupra and the procedure for removal of panels and covers will differ a bit if the install is carried out on any other model this product fit.

## Parts List


---

1. Pressure Pipe Turbo to Intercooler
2. Pressure Pipe Intercooler to Throttle body
3. Turbo outlet Silicone hose
4. Intercooler inlet Silicone hose
5. Intercooler outlet Silicone hose
6. Throttle body Silicone hose
7. 8pcs Hose clamps
8. 2pcs M5x16 Screws
9. Turbo Muffler Delete (Optional)




## Step 1

Disconnect the vacuum hose from the airbox. Loosen the rear spring clamp on the inlet hose and disconnect it from the turbo inlet elbow. Remove the airbox from the car by pulling the rear end upwards and then separate it from the front air duct. Be aware of the drainage pipe underneath the airbox.

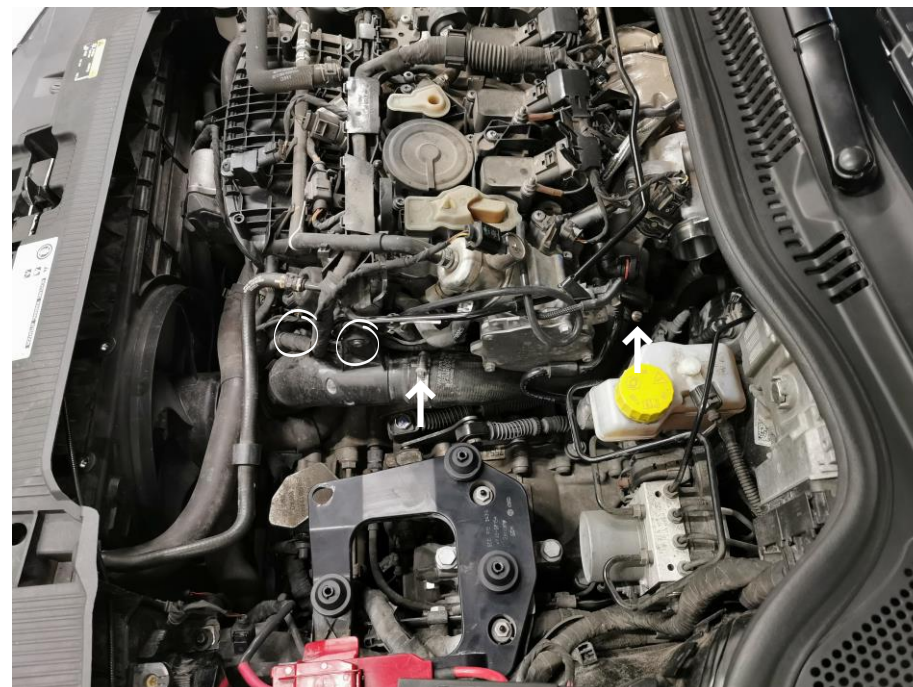

## Step 2

Loosen the hose clamps on the turbo outlet hose and remove the hose. Then unscrew the upper pressure pipe mount and remove the cable harness clip.

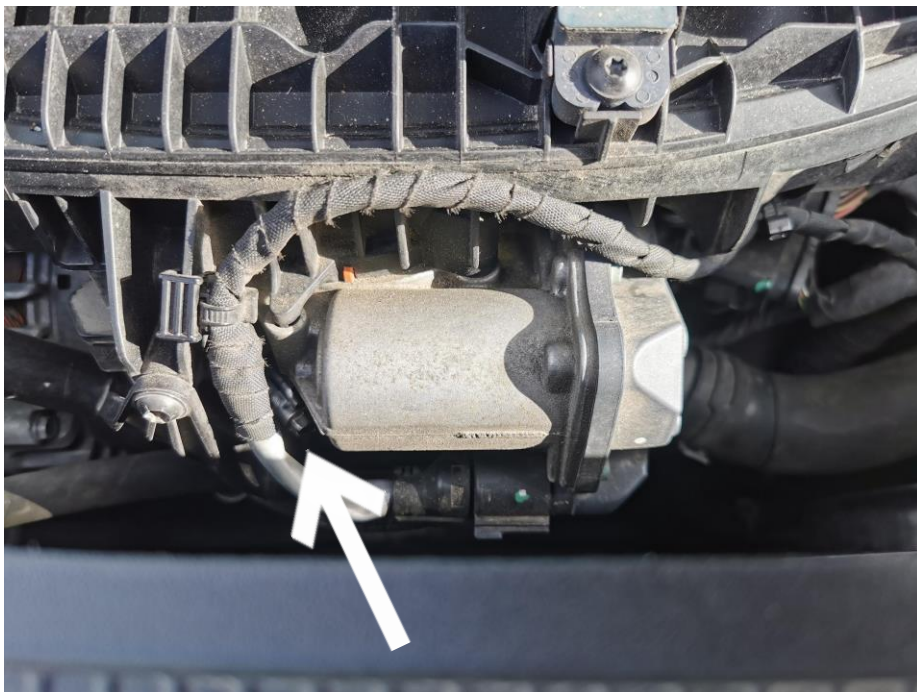

## Step 3

Loosen the hose clamp on the throttle body hose.




## Step 4

Securely lift the car using an auto lift or a jack and jackstands to get access under the car. Then remove the undertray by removing 9x T20 screws and pull it backwards.



## Step 5

Loosen the hose clamps on the intercooler inlet and outlet hoses, then remove them.

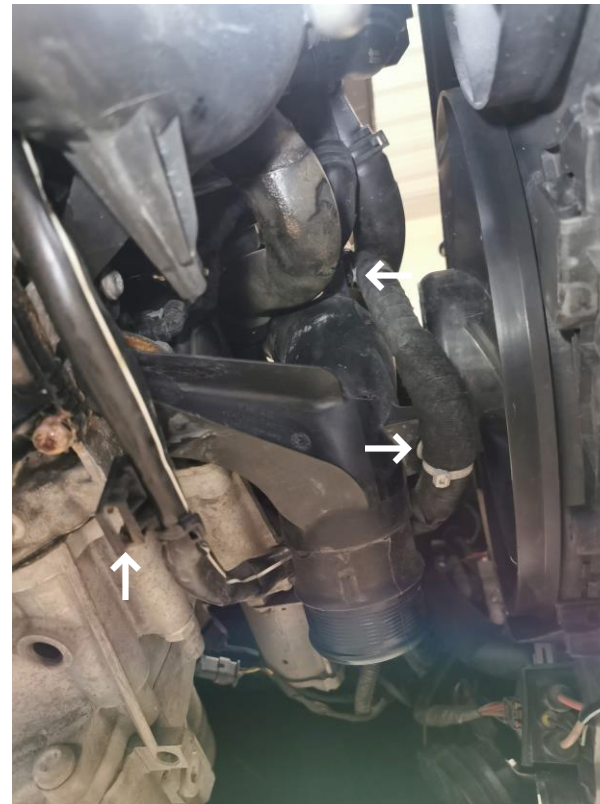

## Step 6

Remove the 3x cable harness clips from the turbo to intercooler pipe.



## Step 7

Disconnect the electrical connector from the sensor and loosen the 3x T30 screws then remove both pressure pipes downwards. The turbo to intercooler pipe can be removed both upwards and downwards.



## Step 8


Transfer the 4 rubber gromets with sleeves and screws from the OE pipes to the do88 performance pipes.  
Transfer the sensor.  
Pre-install the throttle body hose and its hose clamps and clock it as the OEM hose.



## Step 9

Now re-install the do88 parts in the reverse order the OE parts came out and tighten the hose clamps to 5Nm.

If you bought the kit including the muffler delete, follow the next step before installing the turbo outlet hose

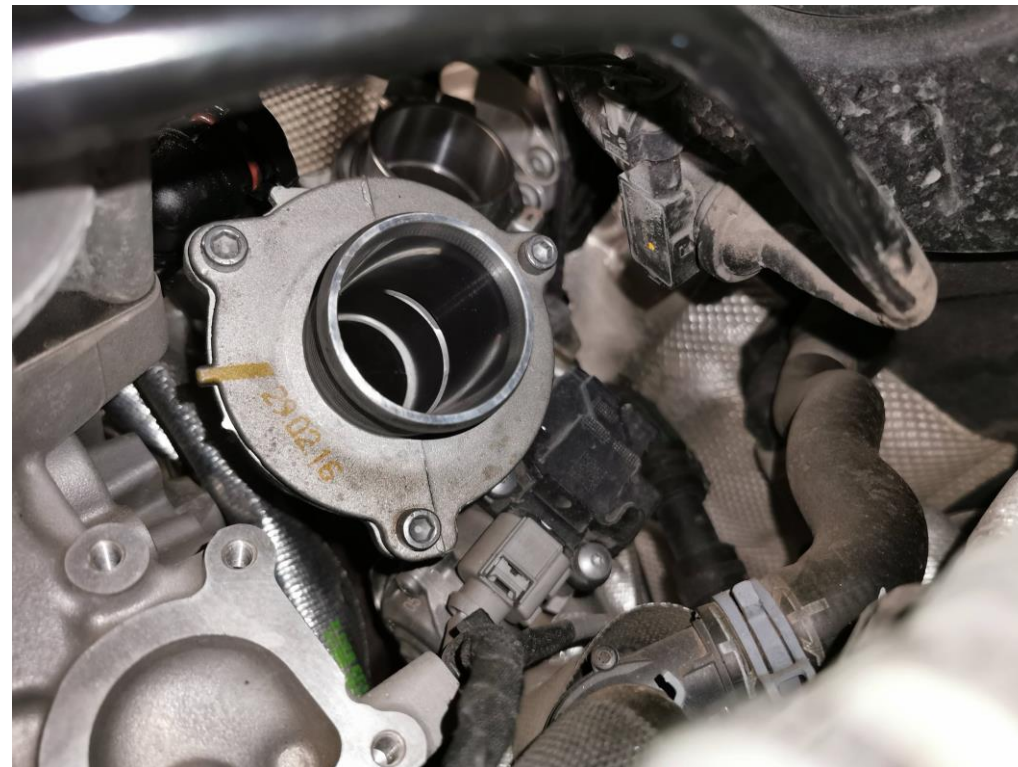

## Step 10

Remove the 3x Allen 5 screws and remove the turbo outlet. Before installing the do88 turbo outlet make sure the O-ring is seated in the groove, use grease to secure it if needed. Then install the do88 turbo outlet with OEM screws and install the hose between turbo muffler and turbo to intercooler pipe.



*Thank you for purchasing another do88 product.*

Please check our website frequently for new product releases.  
If you have any questions or concerns about this product please do not  
hesitate to contact us: [do88.se/contact](https://do88.se/contact)